

List No	Cat No	Part	Fit To	Chassis No Range	Year	Notes	Alt Fit 1	Alt Fit 2	Alt Fit 3	Alt Fit 4	Alt Fit 5	Alt Fit 6	Alt Fit 7	Alt Fit 8	Alt Fit 9
6275	?	Front Axle & Rear Axle	TB42(4)		1908	Chain Drive									
6276	?	Clutch	TB42(4)		1908	Chain Drive									
6277	?	Controls, Hand	TB42(4)		1908	Chain Drive									
6278	?	Brakes, Rear	TB42(4)		1908	Chain Drive									
6283	?	Fan	TB42,TC42(4)		1908	Chain Drive									
6284	?	Controls, Foot	TB42,TC42(4)		1908	Chain Drive									
6285	?	Frame	TB42(4)		1908	Chain Drive									
6286	?	Gearbox	TB42,TC42(4)		1908	Chain Drive									
6289	?	Brakes, Gearbox	TB42(4)		1908	Chain Drive									
6293	?	Chain Case	TB42,TC42(4)		1908	Chain Drive									
6522	?	Radiator	TB42(4)		1908	Chain Drive									
6635	?	Petrol Tank	TB42,TC42(4)		1908	Chain Drive									
6670	?	Front Axle & Rear Axle	TC42(4)		1908	Chain Drive									
6671	?	Clutch	TC42(4)		1908	Chain Drive									
6672	?	Controls, Hand	TC42(4)		1908	Chain Drive									
6673	?	Brakes, Rear	TC42(4)		1908	Chain Drive									
6674	?	Frame	TC42(4)		1908	Chain Drive									
6676	?	Brakes, Gearbox	TC42(4)		1908	Chain Drive									
6709	?	Radiator	TC42(4)		1908	Chain Drive									
6824	?	Springs	TB42(4)		1908	Chain Drive									
6825	?	Springs	TC42(4)		1908	Chain Drive									
7738	?	Petrol Tank	TD38,TE38(4)		1908-1913?		TC33(6)								
7742	?	Engine	TB42,TC42(4)		1908	Chain Drive									
7781	?	Magneto	TB42,TC42(4)		1908	Chain Drive									
7782	?	Water Pump	TB42,TC42(4)		1908	Chain Drive									
7788	?	Magneto	TB22		1909/10	See 8306									
7789	?	Frame	TB22		1909/10	See 8315									
7785	?	Gearbox	TB22		1909/10	See 8316									
7797	?	Front Axle	TB22		1909/10	See 8333									
7798	?	Clutch	TB22,TC22		1909/10										
7799	?	Controls, Hand	TB22,TC22		1909/10										
7800	?	Brakes, Gearbox	TB22,TC22		1909/10										
7804	?	Exhaust Silencer	TB22		1909/10	See 8314									
7805	?	Fan	TB22,TC22		1909/10										
7806	?	Controls, Foot	TB22,TC22		1909/10										
7807	?	Petrol Tank	TD22,TE22(4)		1909-1910		TB22,TC22								
7811	?	Springs	TB22		1909/10	See 8317									
7813	?	Steering	TB22 FORM 1		1909/10	See 8330,8319									
7814	?	Carburettor	TB22,TC22		1909/10										
7817	?	Rear Axle	TB22 FORM 1		1909/10	See 8332									
7832	?	Carburettor	TB42,TC42(4)		1908	Chain Drive									
7871	?	Gearbox	TD57,TE57		1910-1911										
7887	?	Brakes, Gearbox	TD57,TE57		1910-1911										
7903	?	Exhaust Silencer	TD57,TE57		1910-1911										
7918	?	Controls, Hand	TD57,TE57		1910-1911										
7921	?	Brakes, Rear	TB22		1909/10	See 8318									
7969	?	Steering	TB42,TC42(4)		1908	Chain Drive									
8016	?	Exhaust Silencer	TB42,TC42(4)		1908	Chain Drive									
8062	?	Engine	TB22,TC22		1909/10										
8066	?	Water Pump	TB22,TC22		1909/10										
8069	?	Radiator	TB22,TC22		1909/10										
8306	?	Magneto	TC22		1909/10	See 7789									
8314	?	Exhaust Silencer	TC22		1909/10	See 7804									
8315	?	Frame	TC22		1909/10	See 7789									
8316	?	Gearbox	TC22		1909/10	See 7795									
8317	?	Springs	TC22		1909/10	See 7811									
8318	?	Brakes, Rear	TC22		1909/10	See 7921									
8319	?	Steering	TC22		1909/10	See 7813,8330									
8330	?	Steering	TB22 FORM II		1909/10	See 7813,8319									
8332	?	Rear Axle	TB22 FORM II & TC22		1909/10	See 7817									
8333	?	Front Axle	TC22		1909/10	See 7797									
8582	?	Radiator	TD38,TE38(4)		1908-1913?		TD33(6)	TC33(6)							
8605	?	Clutch	TD33(6)		1910		TC33(6)								
8831	?	Front Axle	TD57,TE57		1910-1911		TD33(6)								
8903	?	Front Axle	TD22,TE22(4)		1909-1910										
8904	?	Clutch	TD22,TE22(4)		1909-1910										
8905	?	Controls, Hand	TD22,TE22(4)		1909-1910		TD38,TE38(4)	TD33(6)	TC33(6)						
8906	?	Brakes, Gearbox	TD22,TE22(4)		1909-1910		TD38,TE38(4)	TD33(6)	TC33(6)						
8908	?	Engine	TD22,TE22(4)		1909-1910										
8911	?	Fan	TD22,TE22(4)		1909-1910										
8912	?	Controls, Foot	TD22,TE22(4)		1909-1910										
8913	?	Frame	TD22,TE22(4)		1909-1910										
8914	?	Gearbox	TD22,TE22(4)		1909-1910										
8915	?	Magneto	TD22,TE22(4)		1909-1910	See 9141									
8916	?	Water Pump	TD22,TE22(4)		1909-1910										
8917	?	Radiator	TD22,TE22(4)		1909-1910										
8918	?	Springs	TD22,TE22(4)		1909-1910		TA25,TB25(4)								
8919	?	Brakes, Rear	TD22,TE22(4)		1909-1910										
8920	?	Steering	TD22,TE22(4)		1909-1910	See 9388									
8923	?	Front Axle	TD38,TE38(4)		1908-1913?		TC33(6)								
8924	?	Clutch	TD38,TE38(4)		1908-1913?										
8927	?	Magneto	TD38,TE38(4)		1908-1913?										
8928	?	Engine	TD38,TE38(4)		1908-1913?										
8931	?	Fan	TD38,TE38(4)		1908-1913?										
8932	?	Controls, Foot	TD38,TE38(4)		1908-1913?		TD57,TE57(6)	TD33(6)	TC33(6)						
8933	?	Frame	TD38,TE38(4)		1908-1913?										
8934	?	Gearbox	TD38,TE38(4)		1908-1913?										
8936	?	Water Pump	TJ33,TK38		1910		TD38,TE38(4)								
8938	?	Springs	TJ33,TK38		1910		TD38,TE38(4)								
8939	?	Brakes, Rear	TD38,TE38(4)		1908-1913?										
8940	?	Steering	TD38,TE38(4)		1908-1913?	STD, See 9839									
8988	?	Brakes, Gearbox	TE15,TG15(4)		02/01/1910										
9052	?	Rear Axle	TD22,TE22(4)		1909-1910										
9065	?	Rear Axle	TD38,TE38(4)		1908-1913?		TC33(6)								
9082	?	Carburettor	TD38,TE38(4)		1908-1913?										
9088	?	Carburettor	TD22,TE22(4)		1909-1910										
9141	?	Magneto	TD22,TE22(4)		1909-1910	See 8915									
9244	?	Engine	TD33(6)		1910		TC33(6)								
9248	?	Frame	TD33(6)		1910										
9249	?	Gearbox	TD33(6)		1910										
9250	?	Petrol Tank	TD33(6)		1910										
9251	?	Water Pump	TD33(6)		1910		TC33(6)								
9252	?	Springs	TD57,TE57		1910-1911		TD33(6)								

